



# PAINT PROTECTION FILM Installation Overview



### STEP 1:

Prep the paint surface with white scrubby pad and Film-On application solution (3 ml Film-On per liter of filtered water). In stained areas and for waxed surfaces, gently scrub area with Film-On solution and 50/50 mix of isopropyl alcohol\* (available in 70% concentration bottles) and water.

\*Follow manufacturers handling instructions for alcohol products.



### STEP 2:

Mist the surface with application solution, remove the cap sheet from the pre-cut pattern, and place the pattern (liner side up) on a peel board or prep table. Strip away the adhesive liner.



### STEP 3:

Spray the exposed adhesive with application solution, flip the pattern over, place the pattern on the vehicle and slide it into position.



### STEP 4:


Spray the urethane surface with application solution and use the yellow turbo squeegee to apply film to vehicle surface, beginning in the middle areas and moving outward to the edges of the vehicle. In especially curved areas, lift film and spray in 50/50 mix of alcohol and water to promote rapid tacking. Finish the installation with a bumping method (cover the squeegee with a lint free paper towel) to help extract excess water at the edges. Occasional water dimples or air pockets can be carefully extracted with a small hypodermic syringe\*.

\*Hypodermic syringes are not supplied by CPFilms. All legal and safety-related packaging directives should be followed. In most jurisdictions these products are only accessible through pharmacies or other medical suppliers.



### STEP 5:

Finish out the installation by waxing the applied urethane film and surrounding areas.

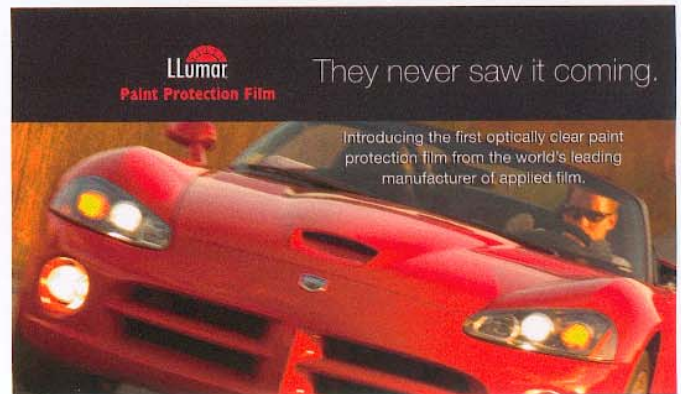

© 2003 CPFilms Inc. P.O. Box 5068, Martinsville, Virginia 24115  
For more information, call 1-800-2LLUMAR  
Printed in U.S.A. 01/04 L1550B